

Motorola C118

To set date and time

	(Menu)
↑	(Scroll up to ...)
Settings	(Select)
↓	(Scroll down to ...)
Other Settings	(Select)
↓	(Scroll down to ...)
Initial Setup	(Select)
Time and Date	(Select)
↓	(Scroll down to ...)
Date format	(Select)
↑↓	(Scroll up or down - 3 date formats - 12/31/99, 31/12/99 or 31-Dec-99)
<Highlight choice>	(Select)
	(Exit)
↑	(Scroll up to ...)
Date	(Select)
<Key in date>	(Use ← and ⇒ to move between day month and year)
	(OK)
↑	(Scroll up to ...)
Time	(Select)
<Key in time>	(Use ← and ⇒ to move between hours and minutes)
	(OK)
	(Exit)
Red Key	To return to 'Home' screen

Motorola C118

To switch SIM PIN prompt on & change SIM PIN code.

(Menu)

- ↑ (Scroll up to ...)
- Settings** (Select)
- ↓ (Scroll down to ...)
- Security** (Select)
- ↓ (Scroll down to ...)
- SIM PIN** (Change)
- ↑↓ (Scroll up or down to ...)
- On** (Select)
- ↓ (Scroll down to ...)
- New Passwords** (Select)
- ↓ (Scroll down to ...)
- SIM PIN** (Change)
- <Enter Old PIN> (OK)
- <Enter New PIN> (OK)
- <Repeat New PIN> (OK)
- (Back)
- Red Key** To return to 'Home' screen